



NEXTEL™

iDEN®

Digital Multi-Service Phone

i500plus User's Guide



Patent and Trademark Information

This product is protected under one or more of the following patents:

4817157, 4896361, 4857928, 5041793, 5060294, 5066923, 5134718, 5140156, 5239963, 5257411, 5287387, 5265219, 5289504, 5316168, 5317247, 5338396, 5389927, 5406588, 5424921, 5457376, 5460906, 5551063, 5557079, 5596487, 5615412, 5638403, 5559468, 5469465, 5170413, 5140615, 5519730, 5241544, 5584059, 5574992, 5396656, 5487091, 5533004, 5299199, 5343499, 5369501, 5509031, 5515379, 5528723, 5598417, 5066923, 5241650, 5278833, 5359696, 5548631, 5410632, 5440582, 5457735, 5457818, 5471670, 5477550, 5481537, 5566181, 5229767, 5208804, 5295140, 5381449, 5440590, 5467398, 5490230, 5620242, 5623523, 5655913, 5715240, 5771440, 5854578, 5675281

Additional patents are pending.

© 1999 Nextel Communications, Inc. All rights reserved. Nextel, the Nextel logo, Nextel Direct Connect, and Nextel Business Networks are trademarks and/or service marks of Nextel Communications, Inc. www.nextel.com

™, Motorola, iDEN, Call Alert, *i500plus*, and Message Mail are trademarks or registered trademarks of Motorola, Inc.

®Reg. U.S. Pat. & Tm. Off.

All other trademarks mentioned in this manual are trademarks of their respective companies.

© Copyright 1999, Motorola, Inc. All rights reserved.

Important!

Be sure to read “*Safety and General Information*” on page 80 before using your Nextel phone.

CONTENTS

Welcome to Nextel	1
Features of your <i>i500plus</i> TM	2
Learning to Use Your <i>i500plus</i>	4
Activating Your <i>i500plus</i>	4
Attaching and Charging the Battery	5
Attaching the Battery	5
Detaching the Battery	5
Charging the Battery with the Travel Charger	5
Battery and Charging Status	5
Turning On Your <i>i500plus</i>	6
Your Nextel Phone Status	6
Turning Off Your <i>i500plus</i>	7
Display Icons	7
About Modes and Menus	8
Changing the Display Language	8
Phone Calls	9
Programming Your Own Phone Number	9
Making Phone Calls	10
Using Other Dialing Methods	10
Scroll	10
Speed Dial	10
Name Search	10
Last Number Redial	11
Automatic Redial	11
Emergency Dial	11
Non-Emergency Dial	11
Receiving a Phone Call	12
Setting the Ringer Volume	12
Selecting a Ring Style	12
Creating, Editing and Using Stored Lists	13
Combined Phone Number and Private ID List Programming	13
Editing and Erasing Phone List Entries	15
Editing and Erasing Private ID List Entries	16
Quickstore of Phone Numbers	17
Quickstore of Private IDs	18
Additional Phone Services	19
Call Waiting	19
Call Hold	19
Call Forwarding	20

Turning On Call Forward	20
Turning Off Call Forwarding	20
Transferring Calls to Voice Mail	21
Caller ID	21
Nextel Voice Mail	22
Setting Up Your Voice Mailbox for the First Time	22
Accessing the Voice Mail Service After Setup	24
Receiving New Voice Mail Messages	24
Viewing Voice Mail Message Status in Your Mailbox	26
Nextel Voice Mail Features	27
Playing Messages	27
Sending Messages	30
Acceptable Destination Addresses	30
Recording and Sending Messages	30
Special Delivery Options	31
Urgent	31
Private Delivery	31
Notification of Non-Delivery	32
Future Delivery of Messages	32
Greetings	33
Group Lists	35
Pager Notification	37
Personal Password and Name Response Options	38
Changing your Password	38
Name Response Options	38
Message Forwarding	39
Caller Options	40
Voice Mail Time and Dates	41
Using Text and Numeric Paging	43
The Nextel Paging Advantage	43
Page Delivery	43
How to Use Nextel Text and Numeric Paging	43
To Send a Page	43
Notification of New Text and Numeric Pages	45
Retrieving New Pages	45
Viewing Your Text and Numeric Pages Status	46
Auto Call Back	46
Nextel Direct Connect	48
Programming Your Own Private ID	48

Nextel Direct Connect Private/Group Speaker	48
Private Calls	49
Receiving a Private Call	50
Call Alert™	50
Call Alert Queuing.....	52
Group Calls	53
Making a Group Call	53
Receiving a Group Call	53
Adding and Storing a Talkgroup	54
Group-Silent Programming	54
Using Your Phone as a Modem	55
Programming Menus	56
Accessories	61
Batteries	61
Travel Chargers	62
Cigarette Lighter Adapter	63
Desktop Dual-Pocket Charger	65
Audio Adapter	68
Dash Mount Holder	69
Swivel Belt Clip	70
Leather Carry Case	70
Hands-Free Car Kit	71
Other Useful Information	73
Nextel Customer Care	74
Understanding Status Messages	75
Terms and Conditions of Service	76
Safety and General	82
Accessory Safety Information	85
Owner's Information	87

WELCOME TO NEXTEL

Thank you for choosing Nextel as your wireless communications provider. The *i500plus™* is one of the most sophisticated digital cellular phones available today, offering you a range of unique, state-of-the-art features.

This guide contains all the information you need to take full advantage of your Nextel service, including:

- **Digital cellular calling** for crystal-clear connections and built-in call security on the all-digital Nextel National Network
- **Nextel Direct Connect™**, an exclusive feature for communicating instantly with one or more co-workers at a fraction of the cost of cellular
- **Voice Mail** to keep you from missing important calls
- **Text and Numeric Paging** to help you stay connected — even when you don't have time to talk on the phone
- **Dial-up Services** capability (see the *Nextel Online Dial-up Services User's Guide*)
- **Net mode** to access Nextel Online Internet Services (future availability)
- You'll also find details on other Nextel features:
 - The all-digital Nextel National Network
 - No roaming fees
 - One-second call rounding after the first minute
 - Flat-rate long distance pricing to anywhere in the continental U.S.
 - No landline connection charges


For more information about Nextel or to view this guide on our web site, visit us at www.nextel.com.

NOTE: TTY access for hearing-impaired users is available with your *i500plus*. See the *Nextel Online Dial-up Services User's Guide* for complete instructions.

Questions?

Call Nextel Customer Care at 1-800-639-6111, or dial 611 from your *i500plus*.

Features of your i500plus™

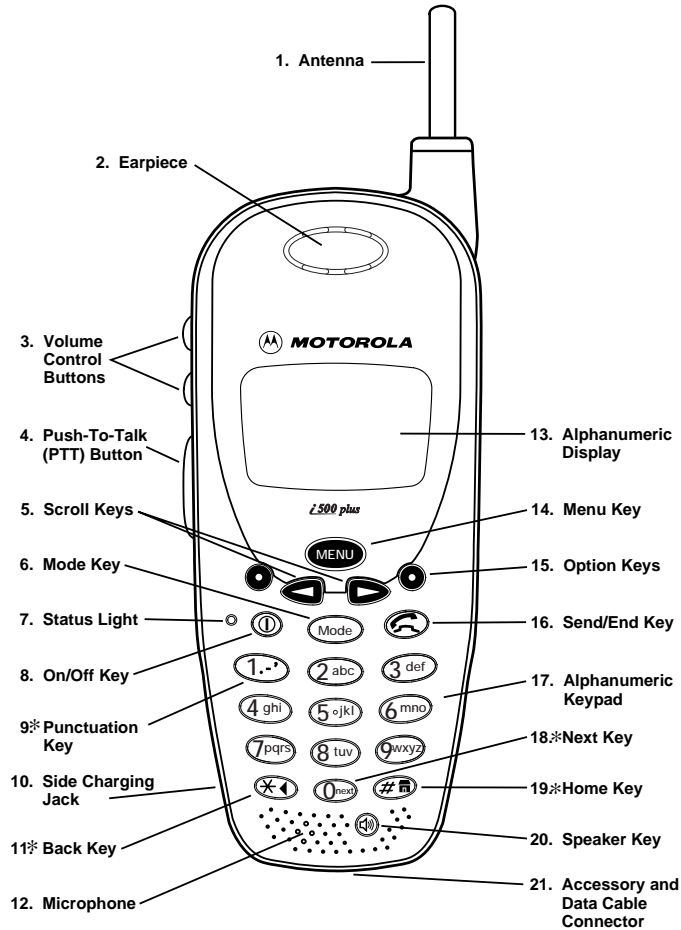

* Applies to Nextel Online Internet Services; future availability

NOTES:

- Remove the plastic film lens protector from the display before you use your i500plus for the first time.
 - The display backlight is activated by pressing any key or button.
-

1.	Antenna	Extend for optimal signal.
2.	Earpiece	Listen to calls when the Nextel Direct Connect speaker is off.
3.	Volume Control Buttons	Press to adjust volume levels in Phone, Private, and Group modes.
4.	Nextel Direct Connect (PTT) Button	Press to transmit a Private or Group Call, or a Call Alert™. Press and hold to talk; release it to listen.
5.	Scroll Keys	Press the left side to scroll backward or the right side to scroll forward through menu options and lists. When entering text, press to erase text or add a space.
6.	Mode Key	Press to change modes [Phone, Private, Group, Net (for future functionality)].
7.	Status Light	Check the status of your connection. <i>See Table 2 on page 6 for more information.</i>
8.	On/Off Key	Press and hold to turn phone ON or OFF.
9.	Punctuation Key	For future functionality.
10.	Side Charging Jack	Connect charging accessories.
11.	Back Key	For future functionality.
12.	Microphone	Speak into during calls.
13.	Alphanumeric Display	View up to 4 lines (12 characters per line) or six lines (16 characters per line) on the display in Mail Services and Net Mode (future functionality).
14.	Menu Key	Press to scroll through menu options.
15.	Option Keys	Press to select a menu option on the display that appears directly above the left or right option key.
16.	Send/End Key	After entering a phone number, press to make a phone call or redial the number. Press to answer incoming phone calls. Press to end phone calls.
17.	Alphanumeric Keypad	Enter telephone numbers, Private Call IDs, and alphanumeric characters.
18.	Next Key	For future functionality.
19.	Home Key	Use to change lettercase when entering text. Also, for future functionality in Net Mode.
20.	Speaker Key	Listen to Nextel Direct Connect calls.
21.	Accessory and Data Cable Connector	Connect accessories and data cables.

Learning to Use Your *i500plus*

This User's Guide is designed to help you learn about the features of your new *i500plus*. By reading it now, you'll be able to take full advantage of all the benefits your Nextel service provides for you and your company.

You will find a handy Quick Reference Guide attached to this manual to help you get started on your *i500plus* right away.

Or, you can view the short video to learn the basics of using your *i500plus*, then refer to the User's Guide later for more in-depth information.

Activating Your *i500plus*

Before you can begin using your *i500plus*, it needs to be activated.

- If you purchased your phone through a Nextel Sales Representative, your phone should be active already.
- If there is a separate activation sheet in this package, simply follow the step-by-step instructions included.


If your display reads "No Service" or doesn't change to the "Phone Ready" screen when you turn on your phone and you know you are in a Nextel coverage area, call Nextel Customer Care at 1-800-639-6111.

NOTE: For first time users:
To register for the first time on the Nextel National Network correctly, you must turn on your *i500plus* in your local calling area prior to traveling.

Attaching and Charging the Battery

Attaching the Battery

1. Release the lock located at the bottom of the battery door by pressing up on the latch, and remove the door.
2. Insert the battery with the “+” and “-” at the top, per the figure. Install the battery bottom first, then press down on the battery to secure it.
3. Replace the battery cover and lock by pressing down on the latch.

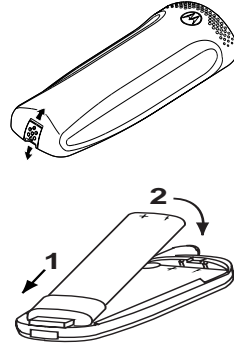

Detaching the Battery

1. Release the battery door by pressing the battery door latch upward.
2. Remove the battery door housing and lift the battery out of the phone.

Charging the Battery with the Travel Charger

Attach the Charger to the *i500plus* via the Side Charging Jack, and plug the Charger into an electrical outlet. For the Cigarette Lighter Adapter, plug into the vehicle’s cigarette lighter receptacle. See “Accessories” on page 61 for complete information and instructions. To get the maximum use from the battery, charge it for at least 10 hours before you use it for the first time. After the initial charging, the battery can be charged more quickly. See Table 1 on page 5 for battery charging status.

Battery and Charging Status

A low battery is indicated by a short, chirp-like sound through the speaker. The battery strength indicator icon shows the remaining charge in your battery. Three bars indicate full charge. As the charge is reduced through use, the bars disappear. The indicator flashes when you have less than five minutes of talk time.

Table 1: Battery Charging Status

	Icon Flashes	0-30%	31-60%	61-90%	91-100%
Charging	Low Battery				
Discharging	Low Battery				

Turning On Your i500plus

After your battery is fully charged, turn on your phone by simply pressing and holding the ON/OFF button .

A set of icons appears briefly on your display, followed by a “Welcome to Nextel” message, and then a “Please Wait Connecting” message.




Within seconds, your phone will sign on to the Nextel National Network, and “Phone Ready” will appear in the display area. Now, you’re ready to use your i500plus!

Your Nextel Phone Status


As you turned on your i500plus, you may have noticed a light flashing next to the ON/OFF button. It’s the “Status Light” indicator that shows you the status of your connection at a glance. See Table 2 on page 6.

Table 2: Status Light Indicator

Status Light Indicator	Nextel Phone Status
Flashing Red	Registering—your i500plus is signing on to the Nextel National Network. Please wait.
Solid Red	No service—your i500plus cannot sign on. If you are in a Nextel coverage area, keep your phone on and it will continue trying to connect every two minutes as long as your phone is turned on. If this continues for 15 minutes or longer, call Nextel Customer Care at 1-800-639-6111. Note: If you are not in a Nextel coverage area, you will also see a red light.
Flashing Green	In service—your i500plus is ready to use. You’re on the Nextel National Network! You can now place and receive calls. Note: Direct Connect (Private and Group) calls are not available outside your home market area.

Solid Green	In use—your <i>i500plus</i> is currently being used. To make sure that you ended the last call, press  .
-------------	---

Turning Off Your *i500plus*

Press and hold the ON/OFF button  until you see the message “Powering Off”.

Display Icons

After you turn on the phone, icons appear on the display to inform you of existing conditions. See the following list.

The following icons may appear on the display:



Signal Strength Indicator

Shows the signal strength. Six bars indicate the strongest signal. Calls and messages may not be sent or received when there is no signal.



Battery Strength Indicator

Shows the remaining charge in your battery. Three bars show full charge. The indicator flashes when you have less than five minutes of talk time remaining.



Voice Mail

Indicates that you listened to but did not save or delete messages. This icon flashes when unplayed messages are waiting in your voice mailbox.



New Text and Numeric Paging

Indicates that you have new incoming pages (icon flashes).



Unread Text and Numeric Paging

Indicates that you have read but not saved pages.



Call Forward

Indicates that incoming phone calls are being forwarded. .



Private/Group Speaker

Indicates that the Private/Group speaker is off. You will hear Nextel Direct Connect calls through the earpiece.



More Information

Indicates that there is more text to read above, below, or above and below the current screen.




About Modes and Menus

Your *i500plus* operates in four different modes: Phone, Private, Group, and Net (*future availability*). By switching modes, you can use your *i500plus* for different operations: phone calls, private and group calls, and Nextel Online Internet Services (*future availability*).

If the word "Ready" does not appear after the mode name in the display, your unit is not available for use in that particular mode.

To switch between these modes: press .







To use menu options:

1. Press .
2. Press  to scroll through the available menu options for the selected mode.
3. Press  under the displayed menu option that you wish to select.

Changing the Display Language

You can customize your *i500plus* to display menus in English, Spanish, French, or Portuguese. The default language is English.

To change the displayed language:

1. Press , , , .
2. Select "Ok".
3. Press   to scroll through the language options.
Selecting "Exit" at any time retains the current language selection.
4. When the desired language appears on your display, select "Ok". The displayed text immediately changes to the selected language.
5. Select "Exit" (in the language selected) to exit this menu.



PHONE CALLS

In addition to making and receiving phone calls in various ways in Phone mode, you can make emergency and non-emergency calls, select ring style notification, and more.

You can receive incoming phone calls while the *i500plus* is in any mode.


You must be in “Phone Ready” mode to make outgoing phone calls.



Programming Your Own Phone Number

Before you get started using your *i500plus*, you may need to enter your own phone number so you can refer to it later if necessary. This is a one-time activity that can be performed using the following instructions. Or, you can wait for your first incoming call, when it is automatically entered.

1. To store your phone number in your Nextel phone, press .
2. Press under “Edit”.
3. Enter your phone number.
4. Press under “Store”.
5. Press under “Exit”.

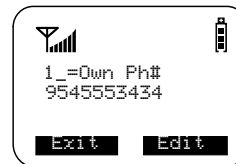




NOTE: To display your phone number at any time, press .



Making Phone Calls

You can place a call by entering the phone number on the keypad (Direct Dial).

1. Enter the number you wish to call.

If you make a mistake, press  to move back one digit at a time, press and hold  to clear all of the entered digits, or press  under "Cancl" to start over.







2. Press  to place the call.
3. To end the call, press .





Using Other Dialing Methods

IMPORTANT: After creating a phone list as described in “Creating, Editing and Using Stored Lists” on page 13, you have the following additional options to make a call:


Scroll





1. Press   to scroll backward or forward through the stored list of numbers and names.
2. Press  to place the call.
3. To end the call, press .

Speed Dial


1. Press  until you see the “Spd#” option.
2. Press  under “Spd#”.
3. Enter the assigned speed-dial number (1-100). You will see the name and phone number associated with the speed-dial number.
4. Press  to place the call.
5. To end the call, press .

Name Search


1. Press  under “Name”.
2. Using the keypad, enter the first letter of the desired name, for example, to search for the name “Bob”:

- a. Enter “B” by pressing  until you reach the “B” listings.
 - b. Press  to scroll through all the names starting with “B” until you see “Bob”.
3. Press  to place the call.
 4. To end the call, press .

Last Number Redial


To redial the last number that you called, simply press .



Automatic Redial

If you receive a “System Busy, Try Later” message, press  to have your phone automatically redial the number. You will hear a ring-back tone when the call is successful.



Emergency Dial

The Emergency Dial feature allows you to call the 911 emergency phone number by pressing and holding  for two seconds. You can press the emergency key even if the keypad is locked. If you are on an active call, you must end it before pressing the emergency key.

1. From any mode, press and hold  until the unit displays “EMERGENCY”. The phone then automatically dials the emergency number.
2. To end the call, press .

NOTE: Access to 911 may not be available in all areas. For details on the Emergency Dial feature, contact Nextel Customer Care at 1-800-639-6111 or dial 611 on your Nextel phone.

Non-Emergency Dial

Now you can call the State Police and Highway Patrol faster, at no charge, when you're on a major highway in Nextel coverage areas that offer non-emergency dialing.




Report traffic accidents, motorist problems, careless drivers or any other non-emergency highway incident.

Your Nextel phone is already programmed with the number provided by the State Police and Highway Patrol units operating in the areas where this service is offered.

Check the Nextel website at www.nextel.com for an up-to-date list of current numbers.




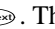 



NOTE: Accessibility of non-emergency dialing service within each state is subject to availability along major highways.

Receiving a Phone Call

- Press , or, press any numeric key (0 through 9).
- Or, press  or .

Setting the Ringer Volume




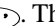 
You can adjust the ringer volume for incoming calls.

1. Press , , , . The display shows your current ringer volume.
2. Press  on the side of the phone to listen as you raise or lower the volume.
If you press  to the lowest setting, the words "Volume Silent" will appear on the phone display.
3. When you determine the desired level, press  under "Exit".











Selecting a Ring Style

With your *i500plus*, you even have a choice on how you'd like to be notified of incoming calls. Your Nextel phone has nine selectable ring styles.

1. Press , , , . The display shows your current

ring style.

2. Press  under “Ok”.
3. Press   to scroll through the available ring styles.
4. Press   on the side of the phone to listen to the selected ring style.
5. To choose the current Ring Style in the display, press  under “Ok”.
To leave the Ring Style unchanged, press  under “Cancel”.
6. Press  under “Exit”.



Creating, Editing and Using Stored Lists

A stored list is made up of Phone Numbers and Private IDs and their related names. Stored lists are convenient because you do not have to remember names and numbers—you simply scroll through your stored list.

NOTES: Want to use your computer to create stored lists for your *i500plus*? Nextel's iDEN Organizer is available for programming names, phone numbers, and Nextel Direct Connect Private IDs into your phone.

To order, call Nextel NextdaySM Accessories at 1-800-914-3240 or contact your Nextel Authorized Representative.

Combined Phone Number and Private ID List Programming

This programming function allows you to program the Phone Number, Private ID with the associated name and speed-dial number in one set of steps.

You can store up to 100 phone numbers in your phone list and up to 100 Private IDs in your Private ID List.

The display holds 12 numeric characters. If the phone number exceeds 12 characters, you can select “More” to see the remaining characters. To return to the start of the number, select “Numbr”.

NOTE: If the caller's 10-digit (703-555-9999) or 11-digit Nextel number (1-703-555-9999) is in your phone list with Caller ID active, the name associated with that number will be displayed.

Storing Names and Numbers

1. Press *****, **#**, **2**, **0**.
2. Press **OK** under "Ok".



The next screen displays the remaining number of phone numbers and Private IDs that you can store.



Next, the "Enter Name" screen displays.

3. Enter the name that you want to associate with this number and select "Store". See the example in Table 3.



Table 3: Entering a Name

Example
To store the name "TIM":

1. Enter "T" by pressing **8** once. The cursor automatically advances to the next space.
2. Enter "I" by pressing **4** three times, until "I" appears on the display.
3. Enter "M" by pressing **6** once.

TIP: Press and hold **#** to change the case of the letter (lowercase to uppercase or uppercase to lowercase). *The default style is uppercase.*

4. Enter the phone number and press **OK** under “Store”.

*To skip the Phone Number entry, press **OK** under “Skip”. You will go directly to the “Enter Prvt ID Number” screen.*



The next screen displays the name that you entered and a flashing speed-dial number where the entry will be stored.

5. Do one of the following:

- To accept the speed-dial number shown, press **OK** under “Store”.
- To change the speed-dial number, enter the desired speed-dial number. The speed-dial number stops flashing.
- To cancel the entry and return to the “Enter Phone Number” screen, press **OK** under “Cancl”.



6. At the “Enter Prvt ID Number” screen, do one of the following:









- Enter the person’s Private ID, then press **OK** under “Store”.
- Or, if you do not wish to enter a Private ID, press **OK** under “Skip”.




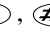 

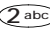 
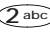 

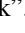 










7. After you enter all the desired numbers, press **OK** under “Exit”.

Editing and Erasing Phone List Entries

1. Press **Left Arrow**, **Home**, **2 abc**, **1..***.
2. Press **OK** under “Ok”. The “Edit Entry?” screen displays.
3. To edit an entry, press **OK** under “Ok”.
 - At the “Edit Entry” screen, press **Left Arrow** **Right Arrow** until the desired entry appears, then select “Ok”.
 - At the “Edit Number” screen, edit the phone number, if you wish; then select “Store”.
 - At the “Edit Name” screen, edit the name, if you wish; then select “Store”.
 - At the “Edit Spd#” screen, edit the speed number, if you wish; then select “Store”.

4. To erase an entry at the "Edit Entry?" screen, press either  or  once to display "Erase Entry?", and then press  under "Ok".
 - Press   to scroll to the desired entry, then press  under "Ok".
 - At the "Erase?" screen, press  under "Yes".
5. Press  under "Exit" to close the Phone List Edit screen.

Editing and Erasing Private ID List Entries



1. Press  , , , .
2. Press  under "Ok". The "Edit Entry?" screen displays.
3. To edit an entry, press  under "Ok".
 - At the "Edit Entry" screen, press   until the desired entry appears, then select "Ok".
 - At the "Edit ID" screen, edit the number, if you wish; then select "Store".
 - At the "Edit Name" screen, edit the name, if you wish; then select "Store".
4. To erase an entry at the "Edit Entry?" screen, press either  or  once to display "Erase Entry?", then press  under "Ok".
 - Press   to scroll to the desired entry, then press  under "Ok".
 - At the "Erase?" screen, press  under "Yes".
5. Press  under "Exit" to close the Private ID List Edit screen.

Quickstore of Phone Numbers


Quickstore allows you to store the last number you dialed quickly, without having to enter the programming menu.

If the last number you dialed is not already stored in your Phone list, the “Store” option will be available.

To use Phone Number Quickstore:

1. Go to the last call you dialed by pressing .
2. Press  under “Store”.



3. Enter the name, then press  under “Store”



NOTE: The name and number entry is stored in the first available storage space. The stored message displays with the name you entered.

Quickstore of Private IDs

Quickstore allows you to store a received or sent Private ID quickly, without having to enter the programming menu.

The ID is added as the last number received or sent in Private mode.

To use Private ID Quickstore, from the Private Ready screen with the Private ID displayed:

1. Press **OK** under “Store”.



2. Enter the name associated with the Private ID.



3. Press **OK** under “Store”. The Stored message displays with the name that you entered.

If the list is full with the maximum 100 entries, you will get the message, “Prvt List Full”. You cannot add names until you remove some names from the list.



4. Next, the Prvt Ready screen displays the stored name.



ADDITIONAL PHONE SERVICES

In addition to making and receiving phone calls in Phone mode, you can use Call Waiting, Call Hold, and Call Forwarding.


Call Waiting

Call Waiting allows you to switch between calls. It is always ON unless you turn it off for a specific call.

Answering an Incoming Call Waiting

1. If you're already on a call, you will hear a tone to alert you of an incoming call. Your display shows the incoming number and asks "Take Call?".
 - To accept the call, press **●** under "Yes".
 - To decline the call, press **●** under "No". If you're a Nextel Voice Mail customer, the call will be forwarded to your Nextel Voice Mailbox.



2. To switch between calls, press **●** under "Hold". This allows you to move between the two calls.
3. To end the active call, press .



Turning Off Call Waiting

You can turn off Call Waiting if you do not want to be interrupted during a call.

1. Press **MENU** until you see "Wait", then select "Wait".
2. Press **●** under "Off". Call Waiting will be disabled for one call, but will automatically reset to "On" after that call.

Call Hold

When you're already on the phone, you can place a call on hold and make a second call. The option "Hold" appears only when you are on an active call.

1. To place the active call on hold, press **●** under "Hold". You may then answer or place another call.
2. To toggle between the two calls, press **●** under "Hold" again.

Call Forwarding

Call Forwarding lets callers reach you wherever you are—incoming calls are forwarded to a designated number. To activate or modify Call Forwarding, you must be in a coverage area (status light is blinking green).

You can select the call forward number from your Phone list using the scroll, name search, or speed dial method. *For more information, see “Making Phone Calls” on page 10.*

Turning On Call Forward

1. Press **MENU** until you see “Forwd” on the last line of the display.
2. Press **⬇** under “Forwd”.



3. To select the number to which you want your calls forwarded, do one of the following:
 - Enter a number or press the scroll keys to select a number from your stored list.



For more information, see “Combined Phone Number and Private ID List Programming” on page 14.

4. Press **⬇** under “On”.
5. After the “Please Wait” message displays, press **⬇** under “Exit”.

Your calls will now be forwarded to the number that you selected and you will see the Call Forward icon **☎▶**.

Turning Off Call Forwarding

1. Press **MENU** until you see “Forwd” on the last line of the display.
2. Press **⬇** under “Forwd”.
3. Press **⬇** under “Off”.
4. After the “Please Wait” message displays, press **⬇** under “Exit”.

Transferring Calls to Voice Mail

If you are a Nextel Voice Mail subscriber, this feature allows you to transfer incoming calls directly to Voice Mail with just the touch of a button. Simply press ● under “End” on your Nextel phone while it is ringing and the call will be transferred to your Voice Mail.

If you have not yet subscribed to Nextel’s Voice Mail service, you can do so by calling Nextel Customer Care at 1-800-639-6111.

Caller ID

With Caller ID, your *i500plus* automatically displays the phone number and/or name of the caller unless it was blocked by the caller. Caller ID allows you to decide whether to take a call right away or let it forward to Voice Mail. To enable forwarding to Voice Mail, the purchase of Nextel Voice Mail is required. Caller ID is not available in all areas.

Display Caller’s Name

A caller’s name will be displayed on your Nextel phone only if you previously programmed it in your phone list with the caller’s 10-digit (703-555-9999) or 11-digit Nextel number (1-703-555-9999). *For more information, see “Combined Phone Number and Private ID List Programming” on page 14.*

Maintaining Your Privacy with Per-Call and Per-Line Blocking

Nextel provides two no-charge methods to prevent those you call from seeing your number on their own Caller ID displays.

Your Nextel phone number cannot be blocked from calls made to 911, 800, 877, 888, or 900 phone numbers.

Per-Call Blocking

Per-Call Blocking lets you selectively block delivery of your phone number to other Caller ID units. Activate free Per-Call Blocking by dialing *67 before dialing the call. Per-Call Blocking is released when the call is ended.

Per-Line Blocking

Per-Line Blocking lets you permanently block delivery of your phone number on every call you make. You can disable this feature on a per-call basis by dialing *82 before the call. You must order this feature from Nextel. To get your company’s line automatically blocked on every call, contact Nextel Customer Care at 1-800-639-6111.

NEXTEL VOICE MAIL

Your Nextel *i500plus* offers a powerful and easy-to-use Voice Mail service. It can take messages when you're away from your phone, when your phone is turned off, when you're on another call, or when you're out of the Nextel coverage area.

Setting Up Your Voice Mailbox for the First Time

From a regular phone:

1. Dial your Nextel Personal Telephone Number (PTN).
2. A greeting will play. During the greeting, press the star key (*) on your phone.
3. The system will prompt you to "Please enter your password".
 - Enter the last 7 digits of your Nextel phone number. This is your temporary password.
4. Follow along with the tutorial to:
 - Create a 4- to 7-digit password.
 - Record your name.
 - Record a greeting.

From a Nextel phone:

1. Dial your Nextel Personal Telephone Number (PTN).
2. The system will prompt you to "Please enter your password".
 - Enter the last 7 digits of your Nextel phone number. This is your temporary password.
3. Follow along with the tutorial to:
 - Create a 4- to 7-digit password.
 - Record your name.
 - Record a greeting.

Be sure to listen all the way through the tutorial to the point that you hear the system say, "Enjoy using Nextel Voice Mail". Your mailbox setup is complete.

Sample Greetings

- For Voice Messages Only

Hello, you've reached _____. I'm sorry I missed your call. If you leave a message at the tone, I'll return your call as soon as possible. If you would like to bypass this greeting in the future, press pound. Thank you for calling.

- For Voice and Numeric Messages

Hello, you've reached _____. I'm sorry I missed your call. To leave a numeric page, press 1. To leave a voice mail message, wait for the tone and then record your message. I'll return your call as soon as possible. If you would like to bypass this greeting in the future, press pound. Thank you for calling.

- For Voice, Numeric and Operator Assisted Messages

The following message option is available only to subscribers with Operator Assisted Paging.

Hello, you've reached _____. I'm sorry I missed your call. To leave a numeric page, press 1. To leave a text page, press 2. To leave a voice message, please wait for the tone and then record your message. I'll return your call as soon as possible. If you would like to bypass this greeting in the future, press pound. Thank you for calling.

For more information about text and numeric paging, see "How to Use Nextel Text and Numeric Paging" on page 43.

Accessing the Voice Mail Service After Setup

To access the Voice Mail service from a regular phone, follow the dialing instructions under “Setting Up Your Voice Mailbox for the First Time” on page 22.

NOTE: To access your messages from your Nextel phone, you must have received at least one Voice Mail message.

TIP: You can dial your Nextel number and leave yourself a message.

To access the service from your Nextel Phone:

1. Press **5** under “Mail”.
2. Scroll to the desired mail option, such as Voice Mail, by using **Left** or **Right** or Volume Control buttons, or press the corresponding numeric key, for example, 1.
3. Press **5** under “Ok”. The Voice Mail inbox opens. The number of new and total messages in your Voice Mailbox is displayed.
4. Press **5** under “Dial” to dial your voice mailbox.



Receiving New Voice Mail Messages





Your Nextel Phone alerts you when you receive a new Voice Mail message.

Voice Mail Notification






When you receive a new Voice Mail message, your Nextel Phone:

- Displays “New Voice Mail Waiting” on the screen (urgent messages will say “Urgent”).
- Flashes the **Speaker** icon at the top of your screen.
- Issues a mail alert ring, every 30 seconds.

To turn your Voice Mail display ON or OFF:

1. Press , , .
2. Press  under "Ok".



3. Press   to scroll to the desired service for display.
4. Press  under "On" or "Off".
5. Press  under "Exit".
6. Press  under "Exit" again.



Viewing Voice Mail Message Status in Your Mailbox

To see the number of messages in your voice mailbox at any time:

1. Press **OK** under “Mail”.
2. Scroll to the desired mail option, such as Voice Mail, by using **Left** **Right** or Volume Control buttons, or press the corresponding numeric key, for example, 1.
3. Press **OK** under “Ok”.
4. The screen indicates the total number of messages in your box, as well as the number of new messages. An exclamation point (!) indicates that at least one of the new messages is urgent.
5. To close your voice mailbox, press **OK** under “Exit”.




Listening to New Messages

When you receive a new message, you can listen to it immediately or wait until later.

To listen to the message now:

1. Press **OK** under “Dial”.
2. When prompted, enter your password. The service will now guide you through your messages.

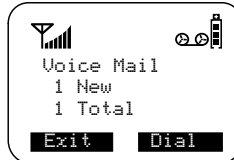

To listen to the message later:

1. Press **OK** under “Exit”. This clears the display. The **Mail** icon stops flashing, but remains on the screen to remind you that you have a new message.



NOTE: The Voice Mail icon **Mail** can appear while you are on a call. If this happens, follow the steps outlined in the above section.

Saving and Deleting Messages

NOTE : You may save or delete a message while the message is still playing. If you do not save or delete the message, it remains a new message in your mailbox for 30 days and will then be deleted.

After you listen to a message:

- Press **7pqrs** to delete the message.

To retrieve a message after you delete it, press ***←**, **3 def**. This will recover ALL deleted messages.

Important! You can recover only the messages that you deleted during your current Voice Mail session. After you exit the session, you cannot recover a deleted message.

- Press **9wxyz** to save the message.

Nextel Voice Mail Features

When you log into the Voice Mail service, you will be at the Main Menu. This is the starting point for any function you want to perform within the Voice Mail service. You can access additional features through various sub-menus described in this guide. You can return to the Main Menu at any time by pressing ***←**, **#m**.

Playing Messages

When you enter your mailbox, the Voice Mail service tells you how many messages you have and if they are new, saved or in preparation. Your messages will play in the following order:

- Urgent
- New (unheard and heard)
- Saved
- Message in preparation (an outgoing message you are preparing to send to another party or to a group list)

For example, you may hear:

“You have four messages. One is new, two are saved and one is in preparation.”

Listening to Messages

1. Log into Voice Mail. See “Accessing the Voice Mail Service After Setup” on page 24.
2. Press **1** to listen to your messages.

Listening Options Quick List

While listening to your messages, you can:

- Press **1** to replay the previous six seconds.
- Press **1**, **1** to rewind to the beginning of the message.
- Press **2** to pause/continue the current message.
- Press **3** to fast forward 6 seconds.
- Press **3**, **3** to fast forward to the end of the message.

During or after a message is played, you can:

- Press **6** to copy a message to another subscriber. See “Acceptable Destination Addresses” on page 30.
- Press **7** to delete a message.
- Press **8** to reply to a message. See “Acceptable Destination Addresses” on page 30.
- Press **9** to save the message.
- Press **#** to skip to the next message.
- Press *****, **3** to recover all deleted messages in that session.

NOTE : If you do not save or delete a message, it remains in your mailbox for 30 days as a “new” message. Both saved and unsaved messages are automatically deleted from the system after 30 days.

Helpful Hints

- Press **1**, **1** to play new unheard messages only.
- Press **#**, **#** to play saved messages.

- Press **5** *o jkl* , **5** *o jkl* to play the date and time stamp for a message (at any time during the message).

Choosing the Order of Messages Played

You can play your messages:

- From the last one received to the first one received (Last In/First Out—LIFO). LIFO is the default.
- Or, from the first one received to the last one received (First In/First Out—FIFO)

To choose between Last In/First Out and First In/First Out:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **4** *ghi* to reach the Personal Options Menu.
3. Press **4** *ghi* to reach Personal Preferences.
4. Press **2** *abc* to reach Playback Preferences.
5. Press **1** *..** to toggle between LIFO and FIFO.

Normal or Automatic Playback

You can navigate through the Play Menu:

- Using the default Normal Playback, which means entering every key as the service prompts you, as described in “*Listening to Messages*” on page 28.
- Or, you can use Automatic Playback, which lets you enter your mailbox and listen to your messages automatically. If you choose Automatic Playback, messages are automatically saved.

To activate or deactivate Automatic Playback:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **4** *ghi* to reach the Personal Options Menu.
3. Press **4** *ghi* to reach Personal Preferences.
4. Press **2** *abc* to reach Playback Preferences.
5. Press **2** *abc* to toggle between Normal and Automatic Playback.

Sending Messages

Acceptable Destination Addresses

This function allows you to record and send a message. You can send the message to a mailbox number, a name in the Voice Mail service directory or a Group List number.

When you send, reply to, or copy a message, you must assign a destination address before the service can deliver the message.

The following options are available when assigning destination addresses to your message:

- **Mailbox Numbers**

You may enter the mailbox number (10-digit telephone number) of a service subscriber. When you enter the mailbox number, the name response of the recipient plays if it is recorded.

- **Group Lists**

You may enter a one- or two-digit Group List Number. You must have previously created the list. See “Group Lists” on page 35.

Recording and Sending Messages

1. Log into Voice Mail. See “Accessing the Voice Mail Service After Setup” on page 24.
2. Press **2** abc to begin recording your message.
3. Record your message. When you finish, press **#** m. The system will ask you to press **9** wxyz to address the message or for special delivery options, press **5** ijkl.
4. Press **9** wxyz to address the message.
5. You may enter one or more of the following to assign destination addresses to your message:
 - Mailbox Number
 - Group List Number
 - 0 + last name; 0 + first name
6. After you have entered all of the addresses, press **#** m to send the message.

Special Delivery Options

Special delivery options can be added when sending, replying to, or copying a message.

- Press **1** for urgent delivery.
- Press **2** for private delivery.
- Press **3** for notification of non-delivery.
- Press **4** for future delivery.

After making your selection:

- Press **9** to address the message.
- For addressing information, refer to Step 5 under “Recording and Sending Messages”.
- When you have entered all of the addresses, press **#** to send the message.

Urgent

When you mark messages as urgent, the recipient will hear it before other messages in the mailbox.

1. Press **5** for delivery options.
2. Press **1** for urgent delivery.
3. Press **9** to address the message.
 - For addressing information, *see Step 5 under “Recording and Sending Messages” on page 30.*
4. When you have entered all of the addresses, press **#** to send the messages.

Private Delivery

When you mark a message as private, the recipient cannot copy it to another mailbox or phone number.

1. Press **5** for delivery options.
2. Press **2** for private delivery.
3. Press **9** to address the message.
 - For addressing information, *see Step 5 under “Recording and Sending Messages” on page 30.*

4. When you have entered all of the addresses, press **#** to send the message.

Notification of Non-Delivery

This feature allows you to be notified when a recipient has not listened to your message by a certain date and time.

1. Press **5** for delivery options.
2. Press **3**. At the prompt, enter the date and the time you want to be notified of non-delivery.
Sample date - October 5 = 1005
Sample time - 1:00 P.M. = 1300
3. Press **9** to address the message.
 - For addressing information, see Step 5 under "Recording and Sending Messages" on page 30.
4. When you have entered all of the addresses, press **#** to send the message.

Future Delivery of Messages

This feature allows you to deliver a message at a specified future time and date.

After recording a message:

1. Press **5** for delivery options.
2. Press **4**. At the prompt, enter the date and the time you want your message sent. You can stamp future dates up to 3 months in the future.
Sample date - October 5 = 1005
Sample time - 1:00 P.M. = 1300
3. Press **9** to address the message.
 - For addressing information, see Step 5 under "Recording and Sending Messages" on page 30.
4. When you have entered all of the addresses, press **#** to send the message.

Important! Once a message has been sent for future delivery, it cannot be retrieved or deleted.

Greetings

Recording a Personal Greeting

Your personal greeting will be played to callers when they reach your Voice Mailbox.

To record a greeting:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **3** ^{def} to reach the Greetings Menu.
3. Press **2** ^{abc} to record your greeting.
4. Record your greeting and press **#** ^m.

Playing Back/Deleting Your Greeting

You can listen to your greeting after you are finished recording it. If you do not want to record your own greeting, Nextel Voice Mail provides a generic greeting. If you have already recorded a personal greeting, you must delete it before the generic greeting will play.

To play or delete your greeting:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **3** ^{def} to reach the Greetings Menu.
3. Press **1** ^{.*} to play your active greeting.
4. Press **7** ^{pqrS} to delete your greeting.

NOTE: Your active greeting is the greeting currently playing to callers.

Greetings Schedule (Optional)

Nextel Voice Mail service lets you record up to 4 separate greetings that are played based on time of day/day of week. For example, your morning greeting can include “Good Morning” in your greeting. If you are traveling, you can set up a special greeting that lets callers know how long you will be away.

To set up multiple greetings, you must:

1. Turn ON the Greetings Schedule function.
2. Record at least 3 greetings.

When you subscribe to Nextel Voice Mail, the greeting schedule is already set up with designated time periods for each of the four greeting slots. They are:

- Greeting 1: Generic Greeting
24 hours a day; 7 days a week if you have not activated your Greeting Schedule
- Greeting 2: Morning Greeting
8:00am - 11:59 A.M.; Monday through Friday
- Greeting 3: Afternoon Greeting
12:00pm - 5:00 P.M.; Monday through Friday
- Greeting 5: Travel Greeting
24 hours a day, 7 days a week

Recording Multiple Greetings

To record your four greetings:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **3** ^{def} to reach the Greetings Menu.
3. Press **4** ^{ghi} to record a selected greeting number.
Enter the greeting number you wish to modify. After you have entered the greeting number, you can do the following:
 - Press **1** ^{.,>} to play the greeting currently recorded in this slot. The Voice Mail service will alert you if a greeting has not been recorded.
 - Press **2** ^{abc} to record a greeting.
 - Press **7** ^{pqrs} to delete a greeting that is already recorded in this slot.

- Press **✶** to go back to the Greetings Menu so that you can record another greeting number.

Activating Your Greeting Schedule

This feature lets you activate your greeting schedule so that the Voice Mail service will automatically play the greetings you have recorded in greeting slots number 2 and 3.

To turn your greeting schedule ON or OFF:

1. Log into Voice Mail. *See “Accessing the Voice Mail Service After Setup” on page 24.*
2. Press **3** for the Greetings Menu.
 - Press **9** to activate or deactivate your greeting schedule.
 - Press **8** to listen to your greeting schedule.

Group Lists

A group list is a group of mailboxes assigned a number and a recorded name. Once you have created one or more lists you can send a message to everyone on the list by simply entering the group list number. You can have up to 40 group lists and each list can have up to 50 addresses.

Setting up Group Lists

1. Log into Voice Mail. *See “Accessing the Voice Mail Service After Setup” on page 24.*
2. Press **4** to reach the Personal Options Menu.
3. Press **2** for group list options.
4. Press **2** to create a group list.
5. Enter the one- or two-digit group list number, then press **#**.
6. Record a name for the list, then press **#**.
7. Enter any or all of the following types of destination addresses:
 - Mailbox Number
 - Group List Number
 - 0 + last name; 0 + first name
8. Press **#** after each entry is made.

9. Press **#** to save all entries added to the list.

Reviewing/Deleting/Adding to a Group List

1. Log into Voice Mail. See "Accessing the Voice Mail Service After Setup" on page 24.
2. Press **4** to reach the Personal Options Menu.
3. Press **2** for group list options.
4. Press **1** to review your group list directory.
5. Press **3** to delete a group list. Enter the one- or two-digit group list number that you wish to delete.
6. Press **4** to modify a list. Enter the list number, then press **#**.
7. Press **1** to add an address to the list.

Reviewing/Changing Group List Names and Numbers

1. Log into Voice Mail. See "Accessing the Voice Mail Service After Setup" on page 24.
2. Press **4** to reach the Personal Options Menu.
3. Press **2** for group list options.
 - Press **4** to modify a list. Enter the list number, then press **#**.
 - Press **2** to review addresses on the list or
 - Press **3** to play the list name or
 - Press **4** to re-record a name for your group list.
 - Record your list name, then press **#**.

Pager Notification

The Voice Mail service has the ability to notify your phone when you have received a message. If you would like to activate this feature, you must enable pager notification. Please call Nextel Customer Care at 1-800-639-6111 to activate this feature, or dial 611 from your Nextel phone.

Enabling Pager Notification

This feature allows you to enable or disable your pager notification and confirm the pager number to which your messages are being sent.

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **4** ghi to reach the Personal Options Menu.
3. Press **3** def to reach the Pager Notification options.
 - Press **3** def to enable/disable pager notification.
 - Press **4** ghi to enable/disable notification on urgent messages only.
 - Press **1** .* to play your pager number.

Limiting Notification to Specific Times

You can choose certain times of the day to be notified of new messages. For example, you could select to be notified between 8:00 A.M. and 5:00 P.M. only. In this example, if someone sends you a message at 5:15 P.M., you will not be notified of that new message until the next day at 8:00 A.M. If you do not specify a time period to be notified of new mail, you will be notified at all hours.

To specify the times you want to be notified:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **4** ghi to reach the Personal Options Menu.
3. Press **3** def to reach the Pager Notification options.
4. Press **5** °jkl to modify your notification time window.

You will be asked to enter the starting time and the ending time for your time window. For acceptable time of day and day of week entries see “*Voice Mail Time and Dates*” on page 41.

Personal Password and Name Response Options

Changing your Password

Once you change your password from the initial password to your own personal password, nobody else can enter your mailbox except you. Passwords must be 4 to 7 digits long. You should choose a combination of letters or numbers that you can remember easily and only you will know. For security purposes, it is recommended that you do not set up a sequential password such as 1-2-3-4, or repeated digits, such as 5-5-5-5.

1. Log into Voice Mail. See "Accessing the Voice Mail Service After Setup" on page 24.
2. Press **4** ghi to reach the Personal Options Menu.
3. Press **4** ghi to reach Personal Preferences.
4. Press **1** .,* to modify your password.
5. Enter a 4- to 7-digit password.
6. Press **#** ☐.

Name Response Options

Your name response is a recording of your name only, without a greeting. It serves as the identification tag for your mailbox. When you send, reply to, or copy a message, your name response will precede your message. Your name response will also play as a confirmation when someone else is sending you a message or adding your mailbox number to that person's Group List.

Recording/Playing/Deleting Your Name Response:

1. Log into Voice Mail. See "Accessing the Voice Mail Service After Setup" on page 24.
 - Press **4** ghi to reach the Personal Options Menu.
 - Press **4** ghi to reach Personal Preferences.
 - Press **3** def to access your recorded name.
 - Press **1** .,* to play your name.
 - Press **2** abc to record your name.

- Press **3** def to delete your name.

Message Forwarding

This feature allows you to program your phone to automatically forward incoming Voice Mail messages to another mailbox. Message Forwarding ensures your messages get attention when you are not available.

To use Message Forwarding you must:

- Program a forwarding address into your mailbox.
- Enable the forwarding feature.
- Select a type of message forwarding.

There are two types of message forwarding:

- *Immediate Forwarding* -- The caller is notified that the message being left will be forwarded.
- *Silent Forwarding* -- The caller hears your personal greeting and is not notified that the message is being forwarded.

Setting Up Message Forwarding


This feature allows you to set up and listen to your current forwarding number.

To set up a forwarding number:

1. Log into Voice Mail. See “*Accessing the Voice Mail Service After Setup*” on page 24.
2. Press **4** ghi to reach the Personal Options Menu.
3. Press **5** ojkl to modify forwarding options.
 - Press **1** .,* to hear your current message forwarding number.
 - Press **2** abc to add an initial forwarding number or to change your number.
 - Press **3** def to enable/disable message forwarding.
 - Press **4** ghi to choose your forwarding type:
 - Press **1** .,* to select Immediate Forwarding.
 - Press **2** abc to select Silent Forwarding.

Caller Options

Your callers have several options when calling you. You can let them know about these options by recording any of the following on your greeting.

- If you would like to leave a numeric page, press **(1..*)**.
- If you would like to send a text message, press **(2^{abc})**. *This option is available only to subscribers with Operator Assisted Paging.* If your message is urgent, press **(5^{ojkl})**.
- To skip this greeting and record a message immediately, press **(#)**.

Voice Mail Time and Dates

The Voice Mail service uses a 24-hour clock (military time), as follows:

Table 4: Military Times

Hour	24-Hour Time
12:00 A.M.	0000
1:00 A.M.	0100
2:00 A.M.	0200
3:00 A.M.	0300
4:00 A.M.	0400
5:00 A.M.	0500
6:00 A.M.	0600
7:00 A.M.	0700
8:00 A.M.	0800
9:00 A.M.	0900
10:00 A.M.	1000
11:00 A.M.	1100
12:00 P.M.	1200
1:00 P.M.	1300
2:00 P.M.	1400
3:00 P.M.	1500
4:00 P.M.	1600
5:00 P.M.	1700
6:00 P.M.	1800
7:00 P.M.	1900
8:00 P.M.	2000
9:00 P.M.	2100
10:00 P.M.	2200
11:00 P.M.	2300

NOTE: To compute the 24-hour clock, add 1200 to the A.M. time to get the P.M. time. For example, adding 1200 to 0200 (2:00 A.M.) gives you 1400 (2:00 P.M.)
Or, subtract 1200 from the P.M. time to get the A.M. time. For example, subtracting 1200 from 1800 (6:00 P.M.) gives you 0600 (6:00 A.M.)

Dates

All dates must have 4 digits in the MM/DD format: 2 digits for the month and 2 digits for the date.

January is 01, February is 02, and so forth. The first day of the month is 01, the second day of the month is 02, and so forth. For example, January 15 is 0115.

USING TEXT AND NUMERIC PAGING

Your new Nextel Phone offers Text and Numeric Paging allowing callers to send you a numeric or text page in an instant. The text or numeric pages are then displayed directly on your phone. You'll quickly find Nextel Text and Numeric Paging service convenient and easy to use.

Nextel Text and Numeric Paging helps keep you in touch with co-workers and customers, regardless of where you travel on the Nextel National Network. Whether it's your office calling with a last minute schedule change, or a customer trying to reach you with an important question, you'll be able to retrieve and respond to pages immediately, all from your Nextel phone.

The Nextel Paging Advantage

Nextel Text and Numeric Paging service gives you all the advantages of a pager and more. Nextel Paging will accept your pages even if you are unavailable, if your phone is turned off, or if you are busy on another call. If you receive a page while outside your coverage area (for example, if you are on an airplane), Nextel will store the page and deliver it as soon as you come back into your coverage area.

Page Delivery

Nextel delivers pages for up to 5 days. Whether you are sending or receiving a page, Nextel will continually attempt to deliver the page until successful. You can easily retrieve and respond to pages anywhere you travel on the Nextel National Network.

How to Use Nextel Text and Numeric Paging

Your Nextel Phone refers to text and numeric pages as Message Mail. Pages are stamped with the time and date the page was left. Your phone can store up to 16 pages at a time.

To Send a Page

Your callers can send numeric pages up to 20 characters in length and text pages up to 140 characters in length, right to your Nextel phone. You can also send a text message from any personal computer that has access to the Internet via the Nextel home page or e-mail.

Callers can quickly and easily leave a numeric or text page in one of the following ways:

- *Directly from any phone* – by pressing (1.-) during your voice mail greeting, callers can leave a numeric page.*
- *Through a Nextel operator* – by pressing (2 abc) during your voice mail greeting. A Nextel operator will send the numeric or text page to your Nextel phone.**
- *Web Paging* — simply go to the Nextel home page at: www.nextel.com and click “Send a Page”. Then address your message to your business associate's or friend's 10-digit Nextel phone number. For example: type in 7035551234. Then, type your message in the message box and click “Send”. The only limit is 140 characters. You can also send a group page to up to 6 Nextel users at one time.
- *E-mail Paging* — Simply address your e-mail message to your business associate's or friend's 10-digit Nextel phone number followed by @page.nextel.com (for example: 7035551234@page.nextel.com). Again, the only limit is 140 characters.
- *Calling 1-800-NEXGRAM (1-800-639-4726)*** — A Nextel operator will forward the numeric or text page to your Nextel phone.

*Be sure to instruct your callers to do this when you record your greeting. See Voice Mail section on “Greetings” on page 33.

**This option is available only to Nextel customers who have subscribed to Operator Assisted Paging. For additional information on how you can sign up for this service, call Nextel Customer Care at 1-800-639-6111.

Checking Message Delivery


Nextel offers three different ways to confirm if your message was delivered. Simply go back to the Nextel Web site at www.nextel.com and choose one of the following three options:

- Click “**Message Status**” and the system will track your message and report back to you on the delivery status of your page.
- Or, record the claim number when you send your page. Later, go back to the Nextel Web site, click “**Message Status**” Web link, enter your claim number and the Nextel phone number of the person you paged. Once again, Nextel will track your message and report back to you on the delivery status of your page.
- Or, on the Nextel Web site, when you send your message, enter the e-mail address in the “**E-mail Confirmation**” space. A reply message will be sent to you letting you know that your message was indeed delivered.

Notification of New Text and Numeric Pages

Your Nextel phone will alert you when you have a new text or numeric page, even if you are on another call. If you are using Nextel Direct Connect, your page will be held and delivered upon completion of your call.

Remember, your Nextel phone refers to text and numeric pages as “Message Mail.” When you receive a new page, your *i500plus* will:

 
1. Display “New Mail Read?” on the screen.
2. Flash the  icon at the top of your screen.
3. Issue a mail alert ring every 30 seconds.




Retrieving New Pages

As soon as you are notified that you have a new page, you can either view the page immediately or wait until later.

 
To view the page now:

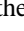1. Press  under “Now”. The screen will briefly display the number of new and saved pages. Then your first page will appear on the screen.



2. Press  under “Read” to view the page. If it fills more than one screen, use the volume control keys to scroll. You now have the option to either erase or save the page you have just viewed.




3. To erase the page, press  under “Erase”. If you have other pages, they will now appear. If you have no other pages, the screen will briefly read “No Mail” and return to the “Phone Ready” screen.



4. To save the page, press **●** under "Save". If you have other pages, they will now appear. At the conclusion of your pages, you have the option to Exit or Read. "Exit" will return you to the "Phone Ready" screen, while "Read" will return you to your pages.

NOTE : Pages that are not deleted will remain in your mailbox until you choose to delete them. Your Nextel phone can store up to 16 pages.

To view the page later:

Press **●** under "Later". This will clear the display, the message will disappear and the  icon will stop flashing, but it will remain on the screen to remind you that you have a new message.


Viewing Your Text and Numeric Pages Status

Your Nextel Phone lets you view the status of your Text and Numeric Pages in your mailbox at any time by letting you see how many new and saved pages you have.

To view your page status:

1. From the Phone Ready screen, select "Mail". The inbox opens.
2. Scroll to "Mesg Mail" or press the corresponding number.
3. Press **●** under "Ok". The screen will briefly display the number of new and saved pages.
4. To view individual messages, see "*Retrieving New Pages*" on page 45.

Auto Call Back

By simply pressing  while viewing a page, your Nextel Phone automatically dials the number that appears on your screen, even if the number is included in the middle of a text page. This allows you to respond immediately to important pages without having to remember the caller's number or fumble around for a pen and paper to write it down.

NOTE : If the page you received contains 2 numbers, Auto Call Back will dial the last number.

Mail Memory Full

If all 16 message registers are full, your phone displays the message “Mail Waiting, Memory Full”. You cannot receive new Message Mail until you empty the register space by erasing saved or unread messages.

Ordering Nextel Paging Features

To order Paging Features, call Nextel Customer Care at 1-800-639-6161 or dial 6 on your Nextel phone.

NEXTEL DIRECT CONNECT

Nextel Direct ConnectSM is a revolutionary way to communicate with your co-workers and clients...for a fraction of the cost of traditional cellular calls.

You may want to talk to a co-worker right away, but you don't want to page that person or leave a lengthy message. With Nextel Direct Connect's Private Call feature, you can find them wherever they are.

 






Or, maybe you need to communicate a last-minute schedule change to your sales people... all 100 of them. It's easy with Nextel Direct Connect's Group Call. This digital 2-way radio feature lets you contact all of them at once!


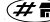 


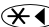In addition, Nextel has created Nextel Business Networks, which allows you to communicate with individuals outside as well as inside your company. These Networks link Nextel customers in similar industries or geographies. So, if you often need to reach a client, vendor, or contractor instantly, work smarter by joining the Nextel Business Network. For more information, call 1-888-NEXTEL2 (1-888-639-8352).

Programming Your Own Private ID

Before you get started using Direct Connect, you will want to store your Private ID for future reference.

To store your *i500plus* Private ID:



1. Press , , , .
2. Press  under "Ok".
3. Enter your own Private ID, which is given to you at time of activation.
4. Press  under "Store".
5. Press  under "Exit".

NOTE: If you forget your Private ID after it is programmed, you can recall it by pressing , , , .

Nextel Direct Connect Private/Group Speaker

Your *i500plus* acts like a phone or speakerphone with Nextel Direct Connect. If the Private/Group speaker is set ON, all incoming audio will be heard through the speaker. This is helpful in monitoring group activity.

If the Private/Group speaker is OFF, a brief alert tone will notify you of Private or Group call activity. Incoming audio will be heard through the earpiece, allowing you to have private conversations.

Press  on your *i500plus* to turn the Private/Group Speaker on or off. The Private/Group icon  on your display indicates that the Private/Group speaker is OFF and audio will be heard through the earpiece.

Private Calls

A Private Call is a one-to-one conversation between you and someone else on another Nextel phone. You'll want to make a Private Call if you need to talk to someone in your local calling area and don't want to page or call that person or leave a message that might not be retrieved for hours.

You can use one of the following methods: Direct Entry, Scroll, or Name Method. The Scroll and Name methods require that you have established a Private Call Calling List in your phone.

Direct Entry



From the "Prvt Ready" mode:

1. Use the keypad to enter the Private ID of the person you want to reach.
2. To speak, press and hold the PTT button, wait for the chirp, then speak into the microphone.
3. To listen, release the PTT button.






Scroll

From the "Prvt Ready" mode:

1. Press   to select the person you want to private call.
2. Press and hold the PTT button, wait for the chirp, then speak into the microphone.
3. To listen, release the PTT button.

Name Method

From the "Prvt Ready" mode:

1. Press  under "Name".
2. Press the key with the first letter of the name associated with the Private ID.
3. Press   to find the desired name in the list.

4. Press and hold the PTT button, wait for the chirp, then speak into the microphone.
5. To listen, release the PTT button.

Receiving a Private Call

When you receive an incoming Private Call, you hear a brief chirp-like tone. Your *i500plus* automatically switches to Private mode, and the Private ID or the name of the caller displays.

Wait for the caller to finish speaking, then press and hold the PTT button. Begin speaking after you hear the chirp.

Call Alert™

Call Alert lets you privately page an individual by sending an audible alert. You'll want to send a Call Alert when you do not need an immediate response. The alert plays intermittently until the individual clears it. Call Alert allows you to contact another Nextel Direct Connect subscriber at no cost and avoid airtime charges.

Sending a Call Alert

Once you have programmed Private IDs into your list, you can send a Call Alert.

From the "Prvt Ready" mode:

1. Press **●** under "Alert".
2. Press **◀ ▶** to scroll to the desired name. *You may also select the name by pressing **MENU** and using the Name Method.*
3. Press the PTT button to send the Call Alert.



Sending a Call Alert to an ID Not Programmed in Your List

From the "Prvt Ready" mode:

1. Press **●** under "Alert".

2. Enter the desired Private ID.
3. Press the PTT button to send a Call Alert.

Receiving a Call Alert

When you receive a Call Alert, you hear a brief chirp-like tone, and see a message on your display with the name or number of the caller.

- To answer the Call Alert, press the PTT button, wait for the chirp, then speak; release to listen.
- Or, to clear the Call Alert, press **●** under “Clear”, or press any key other than the PTT button.

NOTE : Until the Call Alert is cleared or returned, you will not receive any additional Phone, Private, Group, or Net calls (future availability).

Call Alert Queuing

Call Alert Queuing is a feature that allows you to save up to 8 Call Alerts in a list.

Receiving a Call Alert Queuing

When you receive a Call Alert Queuing, you can either clear the Call Alert or save it to the list for later recall.

- To clear a Call Alert, press **●** under “Clear”.
- Or, to place the Call Alert into the queue, press **●** under “Queue”. Pressing **Mode** also queues the Call Alert.



If you receive multiple Call Alerts, the last received Call Alert displays and the remaining Call Alerts are stacked at the beginning of the queue.

Responding to a Call Alert within the Queue

You can respond to the Call Alerts in any order. To select a Call Alert for response:




1. Press **●** under “Queue”.
2. Press **◀ ▶** to scroll to the desired Call Alert.
3. Press the PTT button to respond to the Call Alert. After you respond to the Alert, it is removed from the queue.

Group Calls

Much simpler than setting up a conference call, a Group call allows you to communicate instantly with members of a selected group—a pre-defined set of individuals who share a common communication need. This group is called a Talkgroup.

Talkgroups appear on your display as numbers or programmed names, such as, SALES TEAM or Talkgrp5. You'll want to make a Group call if you want to talk to more than one person at a time.

Either your sales representative or Nextel Customer Care (1-800-639-6111) can help you set up your Talkgroups. After they give you your Talkgroup number, you can name the Talkgroup by entering

, , . Then, follow the instructions in “Adding and Storing a Talkgroup” on page 54.



Making a Group Call

To contact the last group that you called:

1. From the “Group Ready” mode, your most recently used talkgroup displays, for example, “Talkgrp 10”.
2. To place a call to this talkgroup, press and hold the PTT button.
3. Wait for the chirp, then speak into the microphone.
4. To listen, release the PTT button.



To select a Talkgroup from your Talkgroup list:

1. Press   to scroll to the desired talkgroup name.
2. Press and hold the PTT button to talk now, or press “Ok” to select the Talkgroup.

Receiving a Group Call

When you receive an incoming Group call, you will hear a brief chirp-like tone. Your *i500plus* automatically switches to Group mode, and the Talkgroup name displays.

Your phone must be idle, that is, not busy in an active call or on the browser in Net Mode (future availability).

To join a Group call:

1. Wait for the caller to finish speaking.
2. Press and hold the PTT button. Begin speaking after you hear the chirp.
3. To listen, release the PTT button.



 
 
 

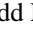 


You can receive group calls only in the Talkgroups that you have predefined.

Any communication activity within the Talkgroup that you select automatically switches your phone into Group mode.

Adding and Storing a Talkgroup

Your *i500plus* can store up to 30 predefined Talkgroups.

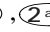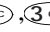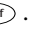 

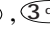 
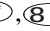 
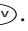 
To add and store a Talkgroup name to your *i500plus*:

1. Press , , ,  abc,  def .
2. Press  under "Ok".
3. At "Add New Entry?", press  under "Ok".
4. At "Enter ID", enter the desired Talkgroup number.
5. Press  under "Store".
6. At "Enter Name", enter the desired Talkgroup name.
7. Press  under "Store".

Group-Silent Programming

If you set the Group-Silent programming menu to silence incoming alerts and voices, the "Group Ready" screen displays as "Group-Silent".

To reset it:

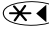1. Press , , ,  def,  tuv .
2. Select "Off", then "Exit".

USING YOUR PHONE AS A MODEM

With Nextel Online Dial-up Services, you can use your *i500plus* as a wireless modem for your IBM™ PC-compatible laptop computer (using Microsoft® Windows). This is particularly useful when there is no wired phone line (wall jack) available.

With this service, simply connect the data cable* to your computer and to the *i500plus* phone. This will allow you to send or receive time-critical information such as e-mail, a field service report, or files.

* *purchased separately*






NOTE : To take advantage of this feature, you must subscribe to Nextel Online Dial-up Services. For more information, contact your Nextel Authorized Representative.

**TTY
USERS :** You can use your phone and computer in TTY mode. Your computer screen and keyboard replace the standard TTY device. For more information, please see the *Nextel Online Dial-up Services User's Guide* that is included with data cable accessories. Contact your Nextel Authorized Representative for more information.

PROGRAMMING MENUS

You can customize the settings on your phone using the programming menus. Many of them have been discussed throughout this guide.

You may access this menu from the Phone, Private, or Group modes.


1. Press  until you see "Prgm" on the display.
2. Press  under "Prgm".
3. Press  under "Ok".
4. Press   to scroll to the desired programming menu option or enter the option keypad number.

SHORT-CUT:

Press  , press  , then press the keypad number. See Table 5 on page 56.

Table 5: Program Menu Options

Press-Keypad Number	Menu Option	To
1	Own Ph #	Automatically store the telephone number of your Nextel phone after you receive the first incoming call. Or, you can enter the number. Also, view your number. See "Programming Your Own Phone Number" on page 9.
2	Own Pvt ID	Display the private number of your phone. You must first store this number. See "Programming Your Own Private ID" on page 48 and "Call Alert™" on page 49.
3	Mail Display:ON/OFF	Turn ON and OFF the New Mail message that is displayed with incoming Voice, Message, or Net Mail (future availability).

Press-Keypad Number	Menu Option	To
4	Manual Lock:ON/OFF	Lock your phone to prevent unauthorized use. You must enter a password to unlock it. Even with the manual lock ON, you can reach emergency help by pressing and holding the  key.
5	Auto Lock:ON/OFF	Automatically lock your phone each time it is powered off to prevent unauthorized use.
6	Auto Answer:ON/OFF	Turn ON or OFF automatic answering of incoming phone calls after 1-4 rings.
10	Last Call Timer	Display the duration of the most recent phone call.
11	Display Timer:ON/OFF	Turn ON or OFF automatic display of the Last Call Timer at the end of each phone call.
12	Reset Timer	Display cumulative airtime of all phone calls since the last time the timer was reset.
13	Total Timer	Display cumulative airtime of all phone calls.
14	1 Minute Beep:ON/OFF	Automatically signal each minute of elapsed phone airtime with an audible beep.
20	Phone/Prvt List	Add phone and private numbers in one procedure. See <i>“Combined Phone Number and Private ID List Programming”</i> on page 14.
21	Phone List Edit	Edit or erase up to 100 frequently called phone numbers and associated names. See <i>“Editing and Erasing Phone List Entries”</i> on page 16.

Press-Keypad Number	Menu Option	To
22	Prvt ID List Edit	Edit or erase up to 100 Private numbers and associated names. See <i>"Editing and Erasing Private ID List Entries"</i> on page 17.
23	Talkgrp List Program	Add, edit, or erase numbers and associated names for up to 10 pre-programmed talkgroups. See <i>"Adding and Storing a Talkgroup"</i> on page 52.
24	Area List Program	Add, edit, or erase numbers and associated names for up to 50 targeted areas.
30	Ringer Volume	Set the ringer volume using the volume control keys, or lower the volume to silence the ringer.
31	Set Ring Style	Select a distinct ring style for incoming phone calls.
32	Mail Volume	Set the volume of incoming pages, Voice Mail, and Net alert tones (future availability) using the volume control keys. Or lower the volume to silence the mail alert tones.
33	Earpiece Volume	Set the default earpiece volume using the volume control keys.
34	Keypad Volume	Set the volume of the keypad tones using the volume control keys, or to silence the keypad tones.
35	Speaker Volume	Temporarily adjust the Private/Group speaker volume for noisy environments.
36	Spkr Vol Set Tone	Turn the speaker volume set tones ON or OFF.

Press-Keypad Number	Menu Option	To
38	Silent Group	Silence all incoming Group Call alerts and voice activity. When set, your screen displays the message, "Group-Silent". See "Group-Silent Programming" on page 52.
40	Change Passcode	Change your secret 4-digit password from the initial setting 0000.
60	Set Baud Rate	Set the modem baud rate between the phone and the PC. See <i>Nextel Online Dial-up Services User's Guide</i> .
61	Data Ring Volume	Set the default data ringer volume using the volume control buttons. See <i>Nextel Online Dial-up Services User's Guide</i> .
62	Pgm Data #	View your circuit data number. See <i>Nextel Online Dial-up Services User's Guide</i> .
63	IP Address	View the Internet Protocol (IP) Address-1 for your browser, as programmed in your phone. If your phone is cabled to a computer, view IP Address-2, the stored IP address of your computer. Use the scroll keys to view either one. (Future availability)
64	Reset KBytes Tx/Rx	View the number of kilobytes sent and received for packet data. (Future availability)
65	Lines per Screen	For message mail, select 4 lines, 12 characters or 6 lines, 16 characters.
70	Language	Select one of four languages for your display text. The default is English. See "Changing the Display Language" on page 8.

NOTE: Do not try to program menus 41 through 51 as you could permanently damage your phone. They are for Nextel Customer Care use only and should never be programmed by customers.

Option Number	Menu Option	Function
41	Feature Reset	Returns all feature settings to their original defaults.
42	Master Clear	Performs Feature Reset and erases all stored lists.
43	Master Reset	Resets the phone's identification number.
44	Change Service Key	Changes or resets the fraud prevention service key.
50	NAM	Selects alternate Numeric Assignment Module (NAM).
51	Net ID	Edits the pre-programmed Network number list and select roaming options.

ACCESSORIES

Batteries

-
- NOTES:**
- For best results, charge the batteries within the temperature range of 10°C to 40°C (50°F to 104°F).
 - Prolonged charging is not recommended. See *Table 6 on page 61 for battery charging guidelines.*
-

Charging the Battery

To get the maximum use from the battery, charge it for at least 10 hours before you use it for the first time. See *Table 6 on page 61 for battery charging times.* After the initial charging, the battery can be charged more quickly.

Attach the Charger to the *i500plus* via the Side Charging Jack, and plug the charger into an electrical outlet.

Table 6: Battery Charging Times

Motorola Battery		Charging Time to 90%:	
Kit Number	Description Chemistry	Standard Travel Charger	Rapid Charger
NTN1699	Standard NiMH	5 hours	75 minutes

Battery Operating Instructions

- Extreme temperatures will degrade battery performance. Do not store your battery where temperatures exceed 60°C (140°F) or fall below -20°C (4°F).
- The battery capacity will be degraded if stored for long periods while fully charged. If long term storage is required, store at half capacity.
- For optimal battery life, use a Motorola iDEN approved NiMH Charger with your Motorola iDEN NiMH battery. Other chargers may not fully charge your NiMH or may yield reduced number of charge cycles.


Travel Chargers

Using a Travel Charger, you can charge a battery from an electrical outlet.


You can use:

- The SPN4474 Standard Travel Charger
- The NTN1700 Rapid Travel Charger with U.S. adapter plug.

Using Travel Chargers

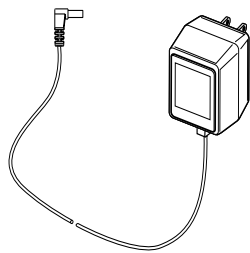

Standard Travel Charger

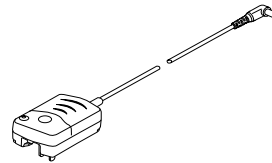

Rapid Travel Charger

Figure 1. Using the Travel Chargers

Using the Standard Travel Charger (110V)

1. Insert the Standard Travel Charger's power supply plug into an electrical outlet (110V U.S.).
2. Insert the Charger's DC plug into the Side Charging Jack on your *i500plus*.

Using the Rapid Travel Charger (110V/220V/240V)

1. Insert the wall plug adapter into the Rapid Travel Charger's power supply.
2. Insert the Charger's power supply into an electrical outlet.
3. Insert the DC plug into the Side Charging Jack of your *i500plus*.
4. The power light (green LED) turns on when the Rapid Travel Charger is receiving power.

Rapid Travel Charger Operating Specifications

Input voltage range: 110V/220V/240V.

Operating temperature range: 0°C to +50°C.

Standard Travel Charger Operating Specifications

Input voltage range: 110V - U.S.

Operating temperature range: 0°C to +50°C.

Cigarette Lighter Adapter

The NTN1702 Cigarette Lighter Adapter enables in-vehicle communications by charging the NiMH battery and providing power to your *i500plus*.

The power light (green LED) will light when the Cigarette Lighter Adapter is receiving power.

Using the Cigarette Lighter Adapter

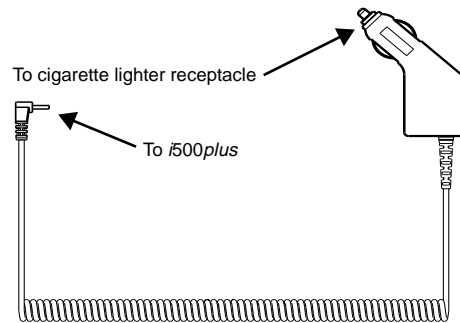


Figure 2. Using the Cigarette Lighter Adapter

1. Insert the Cigarette Lighter Adapter's DC plug into the Side Charging Jack of your *i500plus*. Push firmly until the plug rests securely in the Side Charging Jack.
2. Remove the vehicle's cigarette lighter plug (if one exists) from the cigarette lighter receptacle.
3. Plug the Cigarette Lighter Adapter into the cigarette lighter receptacle. The power light (green LED) will turn on.

While your *i500plus* is attached to the Cigarette Lighter Adapter, you can leave the phone off, turn it on, or use it. For best charging results, leave it off.

Removing the Cigarette Lighter Adapter

1. Unplug the Cigarette Lighter Adapter from the vehicle's cigarette lighter receptacle.
2. Gently pull the plug from the Side Charging Jack of your *i500plus*.

Cigarette Lighter Adapter Operating Specifications

Operating voltage range: 10.8 - 33.0 Vdc.

Operating temperature range: -30°C to +60°C.

Desktop Dual-Pocket Charger

The NTN1701 Desktop Dual-Pocket Charger charges Motorola authorized batteries, as listed on page 61, for the *i500plus*.

NOTE: The Desktop Dual-Pocket Charger should only be powered by the included Rapid Power Supply. The Charger will flash both LEDs red if the Standard Travel Charger is attached.

Charging a Battery

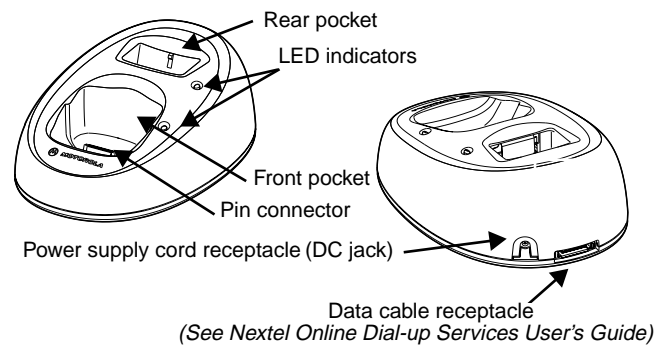


Figure 3. Desktop Dual-Pocket Charger

1. Insert the power supply's DC jack plug into the DC jack receptacle on the back of the Charger. *Use only with the Motorola rapid charger included with your Desktop Charger package.*
2. Plug the power supply end of the power-supply cord into any standard AC outlet. The Charger performs a quick power-up self-test, during which both LED indicators flash green once to indicate a successful power-up.
3. Attach a battery to your Nextel phone. Place the accessory and data cable connector on your *i500plus* onto the pin connector, located in the charger's front pocket.

Adding and Removing a Battery from the Rear Pocket

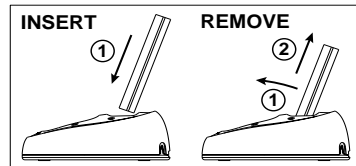


Figure 4. Adding and Removing a Battery from the Rear Pocket

1. Insert the Battery with the Motorola label facing forward and the (+ and -) symbols pointing downward.
2. To remove the Battery, pull it forward, then up and out of the Charger.

NOTE : **If a battery is in the rear pocket...**

and the *i500plus* with a battery is inserted into the front pocket, the battery in the front pocket will charge to full capacity before the battery in the rear pocket is charged. The LED for the rear pocket flashes yellow, indicating that its battery is waiting to be charged.

To remove the battery from the rear pocket, hold the base of the Charger and pull the battery forward then straight up.

Desktop Charger Status

The Charger displays the battery's charge status. The indicator will show one of the following:

solid red =1-30%; solid yellow =31-60%; flashing green =61-90%;
solid green =91-100%.

Desktop Charger Troubleshooting

If the battery is not charging and there is:

A flashing yellow indicator -

- The flashing yellow LED is used to indicate that the pocket is in a wait state.

- If a battery is in the rear pocket, the rear pocket's LED continues to flash yellow until the battery in the front pocket is more than 90% charged (front pocket's LED is solid green). This is normal operation.
- To protect your battery's life expectancy, the Charger does not rapid charge a battery when its temperature is below 5°C (41°F) or above 45°C (113°F).

No LED indication -

- Check that the *i500plus* with battery, or a battery alone, is inserted correctly.
- Make sure that the power supply is plugged into an appropriate AC outlet and that the connector is properly seated.
- *Rear pocket only:* Remove the battery from the Charger. Use an ordinary pencil eraser to clean the three metal contacts on the battery and then place the battery in the Charger.
- If the LED indicator remains turned OFF, the battery may be defective and should be replaced.

A flashing red indicator -

- Remove the battery from the Charger. Use an ordinary pencil eraser to clean the metal contacts on the battery and then place the battery into the Charger.
- If the LED indicator continues to flash red, the battery may be defective and should be replaced.
- If both LEDs flash red, this indicates that the incorrect power supply is plugged in.

Audio Adapter

The Audio Adapter connects an earpiece microphone or headset to your *i500plus* for privacy and hands-free operation.

The Audio Adapter fits onto the bottom of the *i500plus* and provides a standard 2.5mm jack connection for an earpiece microphone or headset.

The following accessories are available:

- Earpiece with Microphone NTN9128
- Headset with Boom Microphone NTN9129
- Lightweight Headset with Microphone NTN9130
- Audio Adapter NTN 9135

Using the Audio Adapter

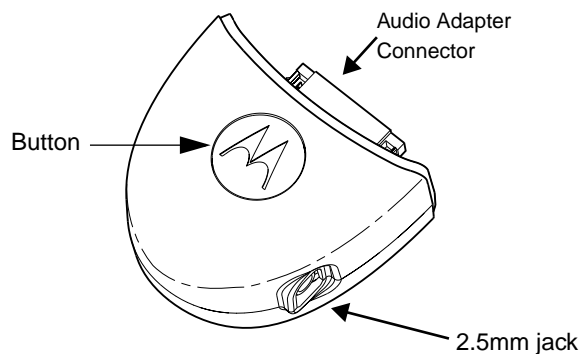


Figure 1. Using the Audio Adapter

1. Hold the phone and the Audio Adapter facing you so that you see the Motorola logo on the adapter.
2. Insert the Audio Adapter's connector into the *i500plus* Accessory and Data Cable Connector. You will hear the connector snap into place.

Attaching/Detaching the Earpiece Microphone or Headset

1. Insert the 2.5mm plug of the earpiece microphone or headset cord into the jack of the Audio Adapter.
2. Pull on the plug, not the cord, to remove the earpiece microphone.

Removing the Audio Adapter

1. Press the button on the front of the Audio Adapter. The button displays the Motorola logo.
2. Pull the Audio Adapter from the *i500plus*.

Dash Mount Holder

The NTN1709 Dash Mount Holder provides a convenient holder for your *i500plus*. The Dash Mount Holder can be installed either horizontally or vertically.

Important! Do not place the dash mount holder over the air bag or in the air bag deployment area. For more information, see “For Vehicles Equipped with an Air Bag” on page 83.

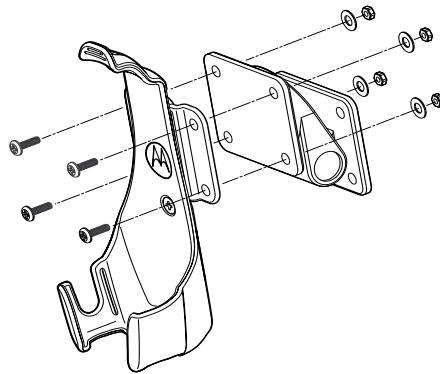


Figure 2. Installing the Dash Mount Holder

Using the Dash Mount Holder

1. Mount the Dash Mount Holder to the dash of your vehicle by securing the four self-tapping screws to the base of the Holder. Or, for a semi-permanent installation, use the included adhesive strip.
2. Snap your phone securely into the holder.

Swivel Belt Clip

The NTN1704 Swivel Belt Clip provides a convenient means by which to carry your *i500plus* with you.

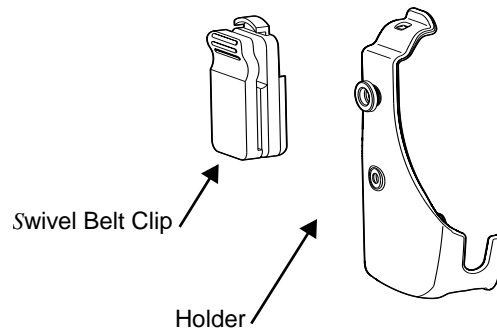


Figure 3. Using the Swivel Belt Clip

1. Attach the Swivel Belt Clip to your belt.
2. Insert your *i500plus* into the belt clip holder and attach the holder to the Swivel Belt Clip.
3. To remove your *i500plus* from the holder, push the holder tab inward while pulling the phone outward.
4. To remove your *i500plus* and the holder from the Swivel Belt Clip, push down on the button on top of the Swivel Belt Clip and lift the holder out.

Leather Carry Case

The Leather Carry Case NTN1714 protects your *i500plus* while on the go. Its leather belt clip attaches easily to your belt or purse. The front of the Carry Case is a clear plastic cover which enables you to use your *i500plus* without removing it from its case.

The Leather Carry Case accommodates most *i500plus* accessories, including Travel Chargers, audio accessories, vehicle accessories, and data accessories (See *Nextel Online Dial-up Services User's Guide*).

Hands-Free Car Kit

IMPORTANT! The Hands-Free Car Kit is also a charger. Therefore, DO NOT operate this kit and the Cigarette Lighter Adapter at the same time.

The NTN1703 Hands-Free Car Kit enables in-vehicle communications by providing a built-in speaker, a power supply for the phone's internal battery charger, hands-free visor microphone, Dash Mount Holder, and power to the phone.

An external Push-To-Talk (PTT) switch is also included. When the phone is turned off, the Hands-Free Car Kit charges the Standard battery in 75 minutes to 90% capacity. Charging time will be longer if the phone is operational during charge time.

Using the Hands-Free Car Kit

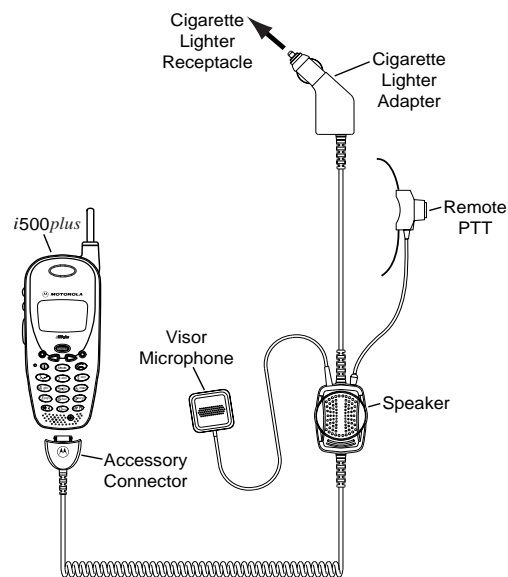


Figure 4. Using the Hands-Free Car Kit

1. While holding the *i500plus* with its front toward you, insert the accessory connector (Motorola logo facing you) into the accessory and data cable connector until it clicks into place.
2. Remove the vehicle's cigarette lighter from the cigarette lighter receptacle.

3. Plug the Hands-Free Car Kit's cigarette lighter adapter into the cigarette lighter receptacle. The power light (green LED) will come on.
4. Selecting the correct position for the hands-free visor microphone is vital for the performance of the hands-free circuitry. It is recommended that the microphone be mounted either on the sun visor directly above (and facing) the driver, or on the headliner, just above (and facing) the driver.

The visor microphone:

- Should NOT be located within 12 inches of the speaker box.
 - Should never be mounted near the vehicle's window, or in a spot where the road and ambient noise are substantially high.
 - Should be mounted so that it does not come into contact with the airbag, or interfere with airbag deployment.
5. Turn on your *i500plus*.
 6. Adjust the speaker volume using the volume control buttons on your *i500plus*.

To remove the *i500plus*:

1. Push the Motorola logo button on the accessory connector and remove the connector from the phone.

NOTE: The *i500plus* should only be used with a Hands-Free Car Kit that has a gray button on the accessory connector. The use of any other hands-free car kit will result in an "incompatible accessory" message on the phone's display.

OTHER USEFUL INFORMATION

Frequently Asked Questions

Q. Which services or calling features follow me when I travel?

A. All digital cellular calling services, including Voice Mail, Paging and related features follow you no matter where you use your phone on the Nextel National Network. Nextel Direct Connect can be used only in your local market.

Q. What number is dialed to reach me when I'm traveling on the Nextel National Network?

A. Every Nextel subscriber gets a regular 10-digit Personal Telephone Number — a 3-digit area code, plus a 7-digit local number. This number is used just like any phone number. And it doesn't matter where you're traveling on the Nextel National Network...you'll get the call. However, if you are traveling long distance and someone calls you from your home market using only your 7-digit number, you will be charged long distance for the call.

Q. How are calls on the Nextel National Network priced?

A. Local calls are priced according to your home market rates, no matter where you are on the Nextel National Network. For long distance calls, you are charged a flat rate per minute, no matter where you call in the U.S. There are no roaming charges associated with any digital calls made while traveling, and there are no incremental access fees to pay for use of the network.

Q. If I live in Chicago, travel to Denver and make a local call there, how will that call be priced?

A. Local is always local with Nextel! You will be charged local rates, because a local call placed in Denver is a local call, regardless of where your home market is located.

Q. What do I do if I have additional questions or my phone breaks?

A. Call Nextel Customer Care at 1-800-639-6111 or dial 611 on your Nextel phone.

However, if you are having problems with your *i500plus*, whenever possible, call Customer Care from another phone as you may be asked to go through steps to correct the problem on your phone.

Nextel Customer Care

Relax! Nextel Customer Care is here to help. There are lots of features packed into your Nextel service...and into your *i500plus* phone. But don't worry. If, after reading this guide, you still have questions about coverage, billing, Nextel Direct Connect or any other service or feature, call us.

We'll be happy to give you help, explanations and anything else you need to enjoy your Nextel service as soon as possible!

Before you call Nextel Customer Care for service or to resolve an issue, be sure to have your IMEI number and your model number ready. These numbers are located behind the battery on the back of your Nextel phone. You'll want to record these numbers, and keep them handy, so that you can replace the battery prior to making your call.

Understanding Status Messages

You may receive status messages under certain conditions. Before contacting your carrier, note the message, numeric code, and the conditions under which it appeared. *Table 7 on page 75* lists and describes the status messages.

Table 7: Status Messages

Status Messages	Message Description
Number Not in Service	The number that you entered is not valid.
User Not Available	The phone that you called is either busy, out-of-range, or turned OFF. Please try again later.
User Not Authorized	The party that you called has not purchased this service.
Please Try Later	This service is temporarily not available. Please try again later.
User Busy in Private	The phone that you called is busy in a Private call.
User Busy in Data	The phone that you called is busy with Nextel Online Service.
Service Restricted	This service was restricted by your service provider or it was not purchased.
Service Not Available	This feature is not available on the current network.
System Busy Try Later	The system is experiencing heavy traffic. Please try again later.
Service Conflict	This service cannot be enabled because an incompatible service has already been turned ON.
Please Try Again	An error occurred. Note the error code and try again.
Self Check Error	A fault was detected with your Nextel phone. If this error recurs, note the error code and contact Nextel Customer Care.
Self Check Fail	An operational fault was detected with your phone. Note the numeric code, turn your Nextel phone off, and contact Nextel Customer Care.

Terms and Conditions of Service

TERMS AND CONDITIONS OF SERVICE: Before calling the Nextel Customer Service Activation Number contained in these materials, you ("Customer") must read and agree to the following terms and conditions of Nextel wireless telephone service ("Service"). By calling to activate service, Customer applies and subscribes for Services provided by Nextel (the "Company") and confirms that Customer has read, understands, agrees to and accepts the terms and conditions stated herein. Customer understands that Company will rely upon the information provided by Customer including credit information, in making a decision to provide Services. Customer understands that Company may request and verify Customer's bank references and perform a credit history check utilizing standard commercial credit reference services in connection with Company's review of the Customer's credit worthiness. Customer understands that a security deposit or air time usage limit may be required.

1. **USE OF SERVICE** — Customer must comply with all FCC rules and regulations. Customer will not use the Service for any unlawful purpose. Customer will not use the Service in aircraft.

2. **CREDIT APPLICATION** — This Agreement shall be contingent upon Company's approval of Customer's credit. Company may require Customer to update credit information from time to time. Customer warrants and represents that all credit information furnished is complete, accurate and true. If Company subsequently determines that any statements regarding Customer's credit are false, incomplete or inaccurate, Company may declare Customer to be in default and may exercise any remedies it has under these Terms and Conditions of Service and at law or in equity.

3. **CUSTOMER RADIO EQUIPMENT** — Company is not responsible for the installation, operation, quality of transmission or maintenance of the equipment. Company reserves the right to change or remove assigned codes and/or telephone numbers when such change is reasonably necessary in the conduct of its business. Customer does not have any proprietary interest in such codes or telephone numbers. Federal and state laws make it illegal for third parties to listen in on service, however complete privacy cannot be guaranteed.

4. **SECURITY DEPOSITS** — Company has the right, in its sole discretion, to require Customer to make a deposit to guarantee payment of Service charges. Customer grants Company a security interest in such deposits, to secure the payment of all sums due thereunder as well as the performance of all other obligations Customer may have to the Company whether now existing or hereafter arising. Upon termination of Service, Company may apply the deposit against any outstanding Service charges of Customer or any other amount owed to Company. Company reserves the right to interrupt services if service appears to have excessive charges or any unusual calling patterns are observed on Customer's account.

Such interruption may be done to protect Customer or Company as the Company determines in its sole discretion.

5. RATES, CHARGES AND PAYMENTS — Company shall issue invoices for Service on a monthly basis which are due and payable upon receipt. Monthly Access Charges shall be invoiced in advance. Airtime and long-distance charges shall be invoiced in arrears. Customer is responsible to pay Company on a timely basis, for charges for Service payments as set forth on the Company's then-current rate plans, and any modifications thereto. Customer acknowledges that chargeable time for telephone calls originated by a unit begins when a connection is established with Company facilities. Customer accepts responsibility for Airtime charges from invoicing telephone calls to its mobile unit from the time that Customer responds to the call. If Customer disputes any Service charges, Customer must pay entire amount set forth in the invoice by the due date and submit a written explanation within forty-five (45) days from the date on the invoice.

If Company determines that an error was made on Customer's invoice, Company shall credit Customer's account in the amount of the error. If Customer does not pay the amount in dispute, Company may exercise any remedies it may have for non-payment of Service charges. Company reserves the right to modify any and all elements of the Service charges at any time. Payments which are not received within thirty (30) days from the day of the invoice shall be subject to late payment charges. If Customer does not make payments, such failure shall be a default and Company shall be entitled to exercise any remedies it may have under these Terms and Conditions of Service or at law or in equity.

6. NONPAYMENT/BREACH — A late payment charge of 1.5% (or the maximum interest rate permitted by law) per month, may be applied to Customer's account if monthly invoices are not paid by the due date. The later payment charge is applied to the total unpaid balance due and outstanding. The late payment charge is for costs related to the non-timely payment and shall be deemed an interest payment. A charge of \$25.00 will be made by Company for any check or negotiable instrument tendered by Customer and returned unpaid by a financial institution for any reason. Company may demand payment by money order, cashier's check or similarly secure form of payment, at Company's discretion. If Company obtains the service of a collection or repossession agency or an attorney to assist the Company in remedying Customer's breach of any payment obligations, Customer shall be liable for this expense. Customer understands that in the event of nonpayment of charges or any other breach of these Terms and Conditions of Service in addition to any other remedies the Company may have, Company may temporarily or permanently terminate Service to Customer. If Company disconnects the Service, Customer shall be liable to pay a re-connect charge of \$25.00 per unit, in addition to the outstanding Service charges before the Company will reactivate Service. Company reserves the right to modify the terms of service as a precondition to reactivating service.

7. TAXES — Customer is responsible for all federal, state and local taxes for fees which are computed in accordance with the appropriate tax laws for Services.

8. LIMITATION AND CONDITION OF LIABILITY/INDEMNITY — The Company's sole liability for Service disruption, whether caused by the negligence of the Company or otherwise, is limited to a credit allowance not exceeding an amount equal to the proportionate charge to the Customer for the period of Service disruption. In no event is the company or lessor liable for actual consequential or special damages caused by its negligence or otherwise nor for economic loss, personal injuries or property damages sustained by customer or any third parties. Customer agrees to indemnify, defend and hold Company harmless from any Customer violations of FCC rules and regulations or Customer violation of any statutes, ordinances or laws of any local, state or federal public authority.

9. NOTICE REGARDING USE OF SERVICE FOR 911 OR OTHER EMERGENCY CALLS — The Service provider hereunder does not interact with 911 and other emergency services in the same manner as land line telephone service. Depending on the circumstances of a particular call, the Service provided hereunder may not be able to identify your location to emergency services and may not always be connected to the appropriate emergency services provider. Customer agrees to hold company harmless against any and all claims, demands, actions or causes of action (including all actions by third parties) arising out of the use or attempted use of the company's service to access 911 or other emergency services.

10. NO WARRANTY (SERVICE) — Company makes no warranties, express or implied, including without limitation, any implied warranty of merchantability or fitness for a particular purpose to customer in connection with its use of the service. In no event shall company be liable for incidental or consequential damages to the full extent the same may be disclaimed by law.

Customer acknowledges that service interruptions will occur from time to time and agrees to hold company harmless for all such interruptions.

11. NO WARRANTY (EQUIPMENT) — Company makes no warranties or representations of any kind, statutory, expressed or implied, to customer or any other purchaser of equipment activated on the service. Without limiting the foregoing, company specifically makes no express or implied warranties of merchantability or fitness for a particular purpose. Customer hereby waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise. In no event shall company be liable for consequential, special or incidental damages, whether or not occasioned by company negligence and including, without limitation, liability for any loss or damage resulting from the interruption or failure in the operation of any equipment activated on the service. There are no warranties which extend beyond the description contained herein. Customer assumes the entire risk as to the quality and performance of the equipment.

If the equipment proves defective, the costs of all necessary servicing and repair will be borne by the customer.

12. NEXTEL BUSINESS NETWORKS -- There is no group call available on the Nextel Business Networks. There is no pooling of Nextel Direct Connect minutes between companies on the Nextel business networks. It is possible that participants on the Nextel Business Network could determine the private identification numbers of customer's units and be able to private call those units. It is also possible that users of customer units could determine the private identification numbers of other Nextel Business Network participants and private call them.

©1999 Nextel Communications, Inc. All rights reserved. Nextel, the Nextel logo, Nextel Direct Connect, and Nextel Business Networks are trademarks and/or service marks of Nextel Communications, Inc.

™, Motorola, *i500plus* and Call Alert, IBM and Microsoft are trademarks; and iDEN is a registered trademarks of Motorola, Inc.

®Reg. U.S. Pat. & Tm. Off.

SAFETY AND GENERAL INFORMATION

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR INTEGRATED MULTI-SERVICE PORTABLE RADIO.

For the Safe and Efficient Operation of Your Radio, Observe these Guidelines:

Your radio product contains a transmitter and a receiver. When it is *ON*, it receives and transmits radio frequency (RF) energy. The radio operates in the frequency range of 806 MHz to 870 MHz and employs digital modulation techniques. When you communicate with your radio product, the system handling your call controls the power level at which your radio product transmits. The output power level typically may vary over a range from 0.00024 watts to 0.6 watts.

Exposure To Radio Frequency Energy

Your Motorola Radio Product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) IEEE. C95. 1-1992
- National Council on Radiation Protection and Measurements (NCRP). Report 86
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- National Radiological Protection Board of the United Kingdom, GS 11, 1988
- Verband Deutscher Elektrotechniker (VDE) DIN-0848
- Department of Health and Welfare Canada. Safety Code 6

To assure optimal radio product performance and make sure human exposure to radio frequency electromagnetic energy is within the

guidelines set forth in the above standards, always adhere to the following procedures:

When placing or receiving a phone call, or using the group and private call functions with a Group/Private Speaker OFF (muted speaker icon visible in the display), hold your radio product as you would a telephone. Speak directly into the microphone and position the antenna up and over your shoulder.

When using your radio product as a traditional two-way radio while making group or private calls with the Group/Private Speaker ON (no speaker icon visible in the display), hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.



For body-worn operation, with or without an earpiece or any other accessory, the antenna should be kept at least one inch (2.5 cm) from the body when transmitting. A carry holder with a belt clip is provided with the radio product for body-worn use.

When using any data feature of the radio product, with or without an accessory cable, position the antenna of the radio product at least one inch (2.5 cm) away from the body.

DO NOT hold the antenna when the radio is “IN USE”. Holding the antenna affects call quality and may cause the radio product to operate at a higher power level than needed.

Interference to Medical and Personal Electronic Devices

Most electronic equipment is shielded from RF energy. However, certain equipment may not be shielded against the RF signals from your radio product.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the radio product more than six inches from the pacemaker when the radio product is turned ON.
- Not carry the radio product in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio product OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some radio products may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your radio product OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Interference to Other Electronic Devices

RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or representative to determine if these systems are adequately shielded from external RF energy. Also check with the manufacturer of any equipment that has been added to the vehicle.

Turn your radio product OFF before boarding any aircraft to prevent possible interference to aircraft systems. Regulations of the United States Federal Communications Commission prohibit use when the plane is airborne. The United States Department of Transportation regulations require you have permission from a crew member to use your radio product while the plane is on the ground.

Safety and General

Use While Driving

Check the laws and regulations on the use of wireless telephones in the area where you drive. Always obey them.

When using the radio product while driving, please:

- Give full attention to driving and to the road
- Use hands-free operation, if available
- Pull off the road and park before making or answering a call if driving conditions so require.



OPERATIONAL WARNINGS

WARNING

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn off your radio product when you are in any area with a potentially explosive atmosphere, unless it is a radio product type especially qualified for use in such areas (for example, Factory Mutual Approved). Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury, or even death.

Note: *The areas with potentially explosive atmospheres referred to above include fueling areas such as: below decks on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often, but not always posted.*

Batteries

Do not replace or charge batteries in a potentially explosive atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion.

BLASTING CAPS AND AREAS

To avoid possible interference with blasting operations, turn off your radio product when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

FOR VEHICLES EQUIPPED WITH AN AIR BAG

Do NOT place objects, including both installed and portable wireless equipment, in the area over the air bag or in the air bag deployment area. An air bag inflates with great force. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



**Caution OPERATIONAL
CAUTIONS**

DAMAGED ANTENNAS

Do not use any portable radio product that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

BATTERIES

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

Cleaning Instructions

Clean the external surfaces of the radio product with a damp cloth, using a mild solution of dishwashing detergent and water. Some household cleaners may contain chemicals that could seriously damage the radio product. Avoid the use of any petroleum-based solvent cleaners. Also, avoid applying liquids directly on the radio product.

Antenna Considerations


Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio product, or result in violation of local agency regulations.

Accessory Safety Information

IMPORTANT:

SAVE THESE ACCESSORY SAFETY INSTRUCTIONS

- Before using any battery or battery charger, read all the instructions for and cautionary markings on (1) the battery, (2) the battery charger, which may include a separate wall-mounted power supply or transformer, and (3) the radio product using the battery.
- Do not expose any battery charger to water, rain, or snow as they are designed for indoor or in-vehicle use only.
- Since a battery charger is designed for indoor or in-vehicle use only, do not expose a battery charger to water, rain, or snow.

	To reduce the risk of injury, charge only the rechargeable batteries listed in the Accessories section of this manual. Other types of batteries may burst, causing personal injury and damage.
WARNING	

- To reduce the risk of damage to the cord or plug, pull by the plug rather than the cord when you disconnect the battery charger from the power source outlet.
- Do not operate any battery charger with a damaged cord or plug - replace them immediately.
- Battery chargers may become warm during operation, but not hot. If it becomes hot to the touch, unplug it from the power outlet immediately and discontinue its use.
- Use of a non-recommended attachment to a battery charger may result in a risk of fire, electric shock, or injury to persons.
- Make sure the battery charger power cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.
- An extension cord should not be used with any battery charger unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:
 - The pins on the plug of the extension cord are the same number, size, and shape as those on the plug of the charger.
 - The extension cord is properly wired and in good electrical condition.

- The cord size is 18AWG for lengths up to 100 feet and 16AWG for lengths up to 150 feet.
- Do not operate any battery charger if it has received a sharp blow, has been dropped, or has been damaged in any way; take it to a qualified service technician.
- Do not disassemble a battery charger; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- Maximum ambient temperature around the power supply or transformer of any battery charger should not exceed 40°C (104°F).
- The output power from the power supply or transformer must not exceed the rating given on the Desktop Dual-Pocket Charger.
- The disconnection from the line voltage is made by unplugging the power supply from the AC receptacle.
- To reduce risk of electric shock, unplug any battery charger from the outlet before attempting any maintenance or cleaning.
- For optimum charging performance, turn off the radio product while charging it in any battery charger.

OWNER'S INFORMATION

Mobile Equipment Identifier (IMEI)

Own Phone Number

Own Private ID

Date Purchased

Sales Representative Telephone Number

Customer Care Number

1-800-639-6111